




Installation

Ignitor Installation Instructions KIT03033

⚠ WARNING!
Hazardous Voltage!

Disconnect all electric power including remote disconnects before servicing. Failure to disconnect power before servicing can cause severe personal injury or death.

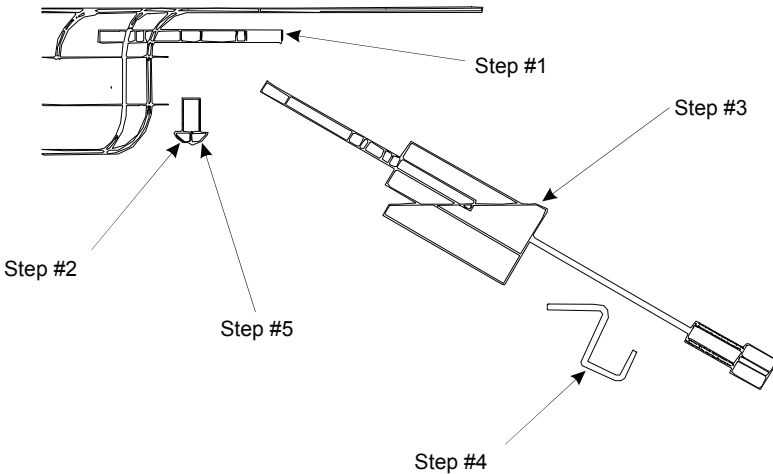

- Step 1 - Place gasket over ignitor opening.
- Step 2 - Install screws. (Tighten only part of the way.)
- Step 3 - Insert ignitor in opening.
- Step 4 - Install spring retainer over screws.
- Step 5 - Tighten screws.

Trane optimizes the performance of homes and buildings around the world. A business of Ingersoll Rand, the leader in creating and sustaining safe, comfortable and energy efficient environments, Trane offers a broad portfolio of advanced controls and HVAC systems, comprehensive building services, and parts. For more information, visit www.Trane.com.

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.